


# GM Bracket Thermostat

This unique design thermostat is enclosed in a thermostat housing attached to the engine. A Stant® 10232 thermostat housing cap is located on top of the housing for easy access and quick replacement.

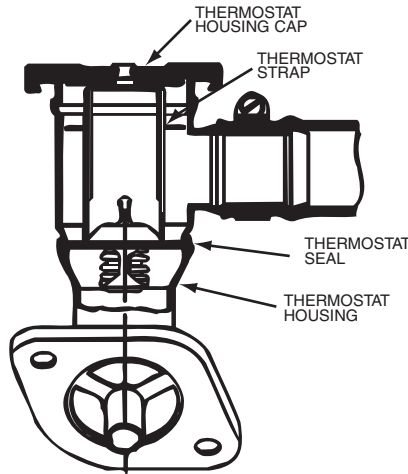

## Installation Instructions

### For GM Bracket Design Thermostats

**Caution: Failure to comply with these instructions may result in serious injury.**

1. Allow cooling system to cool before servicing.
2. Prevent accidental starting of the engine by removing the ignition key.
3. Do not attempt to remove the thermostat housing cap when engine is hot.
4. After the engine cools, turn the thermostat housing cap slowly counter-clockwise to remove. If there is any indication of pressure, stop immediately.
5. Remove the thermostat by grasping the thermostat strap and pulling upward.
6. Before installation of the new thermostat, make sure the thermostat sealing seat in the housing is clean and free of any solid material which will cause leakage. Recheck coolant level and add if necessary.
7. To install the new thermostat, lower the thermostat into the housing, using the thermostat strap as a handle. Make sure that you place the thermostat down into the housing, seating the thermostat. (No excessive force is needed.)
8. Replace the thermostat housing cap by turning clockwise. If the cap fails to seal the filler neck and leaks coolant, replace the cap.